

G Licht / Lights / Lumière / Luces / Verlichting

1

2

3

4

1x

2x

3x

4x

H Blinken / Flashing / Clignotement / Intermitentes / Knipperen

1

2

3

4

1x

2x

3x

4x

I automatisch Kuppeln / Automatic coupling / Attelage automatique / Acoplamiento automático / Automatisch koppelen

1

2

1

2

K Lenkjustierung / Steering adjustment / Ajustage de la direction / Ajuste de dirección / Stuurinrichting afstellen

1

2

1

2

SIKUCONTROL
Bedienungsanleitung 6797 / Operating instructions for 6797
Mode d'emploi 6797 / Instrucciones de uso 6797
Gebruikshandleiding 6797

A Batterien einlegen / Inserting the batteries / Placer les piles / Colocación de las pilas / Batterijen plaatsen

1

2


3

4

5

B Systemstart / System start / Démarrage du système / Inicio del sistema / System starten


1 Download SIKU**CONTROL**APP:
Available on the Google play App Store

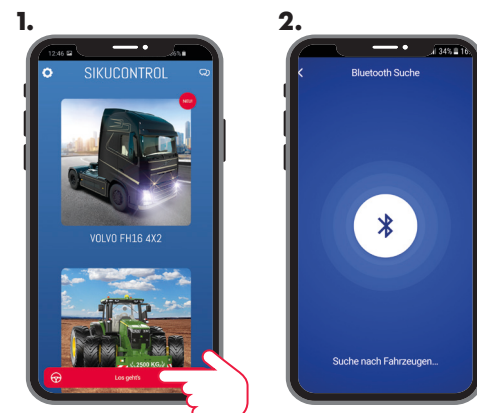

B Systemstart / System start / Démarrage du système / Inicio del sistema / System starten




C Frontlader heben und senken / Raising and lowering front loader / Lever et abaisser le chargeur frontal / Subir y bajar el cargador frontal / Frontlader omhoog en omlaag

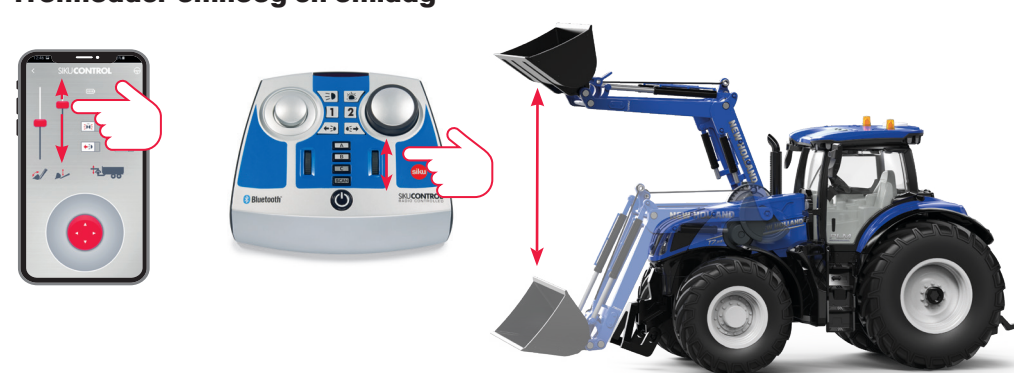



D Schaufel heben und senken / Raising and lowering shovel / Lever et abaisser la pelle / Subir y bajar la pala / Schuif omhoog en omlaag




E Palettengabel montieren / Mounting pallet fork / Monter le lève-palettes / Montar la horquilla para paletas / Paletvork monteren

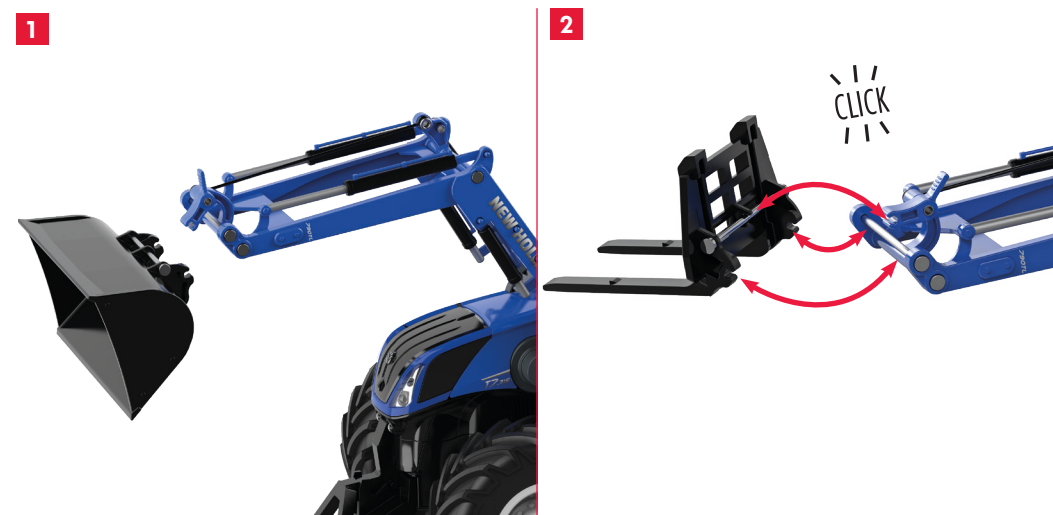

F Palette aufladen und Parallelführung der Gabel / Loading a pallet and parallel motion of the fork / Charger une palette et guidage parallèle des fourches / Cargar paleta y guiado paralelo de la horquilla / Paletvork laden en parallelgeleiding van de vorken

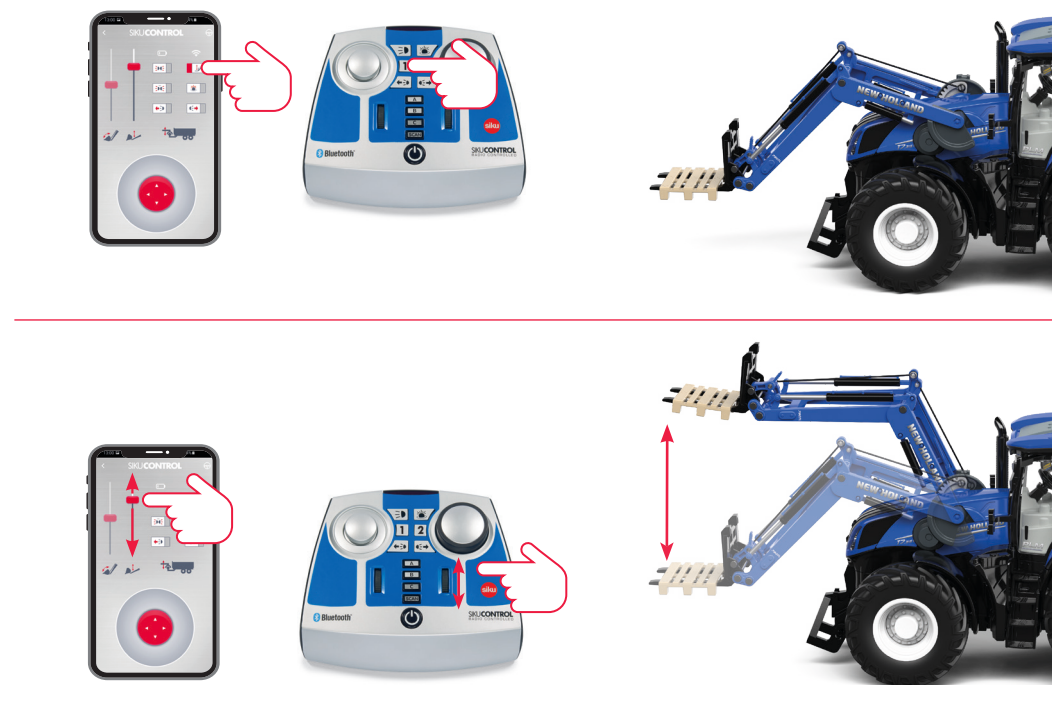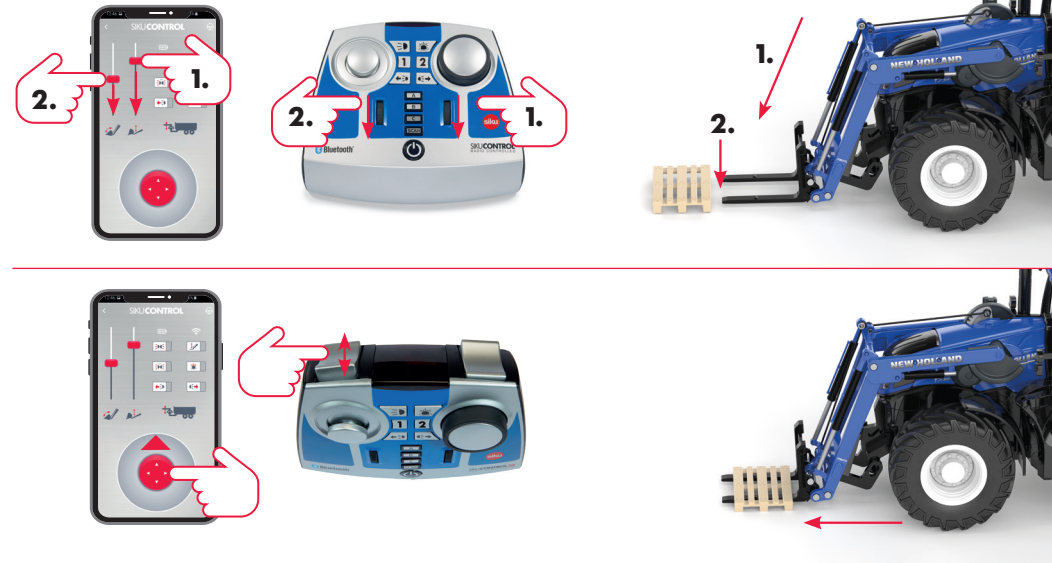

I Steuerung / Control / Commande / Control / Besturing

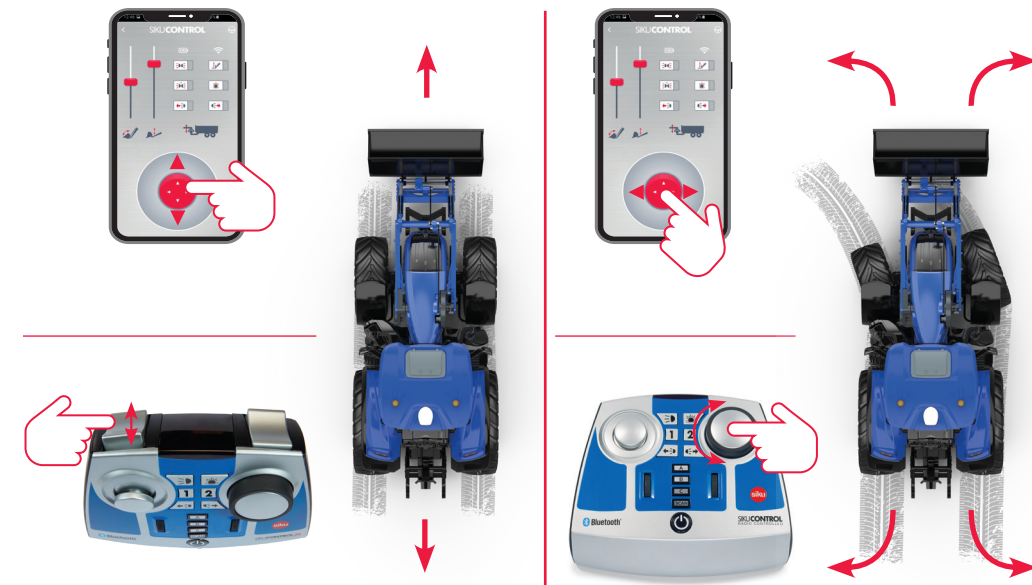

oder / or / ou / o / of