



F Blinken / Flashing / Clignotement / Intermitentes / Knipperen

1

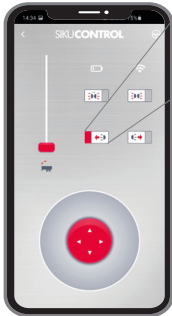



2

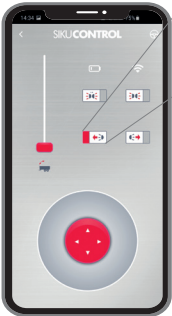




3






4



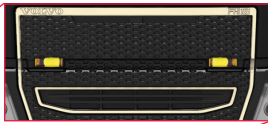


G Kuppeln / Coupling / Attelage / Acoplamiento / Loppelen

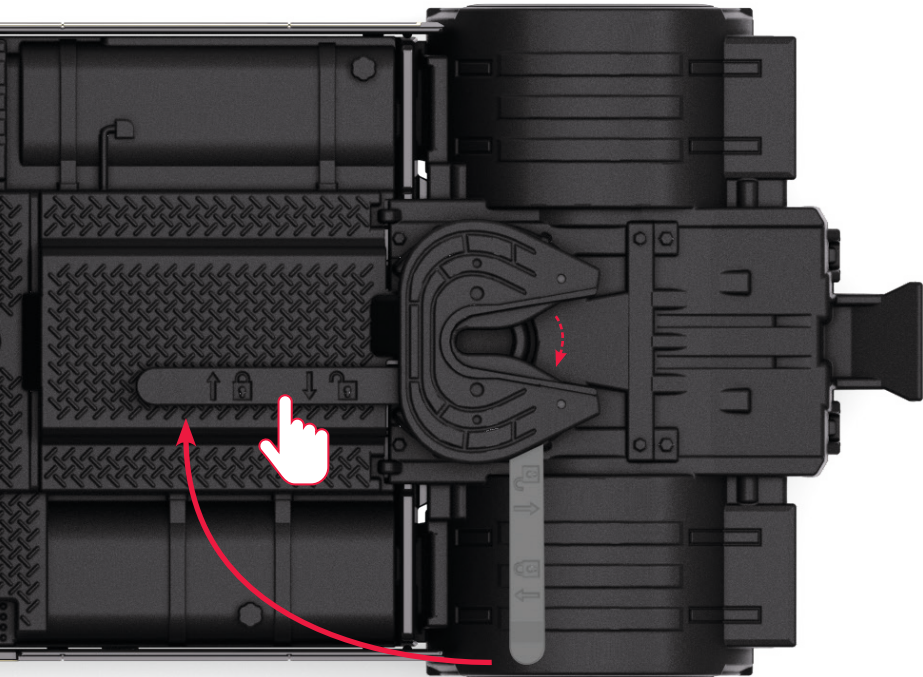


H Eigenen Modellnamen vergeben / Assign your own model name / Attribuer des noms de modèles propres / Asignar un nombre de modelo propio / Eigen modelnaam geven

1

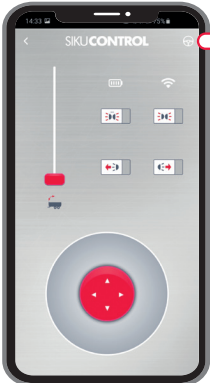

2

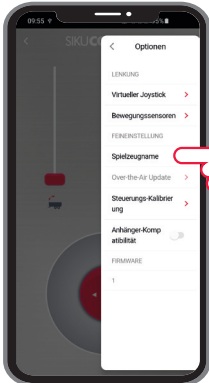


3




I Lenkjustierung / Steering adjustment / Ajustage de la direction / Ajuste de dirección / Stuurinrichting afstellen

1

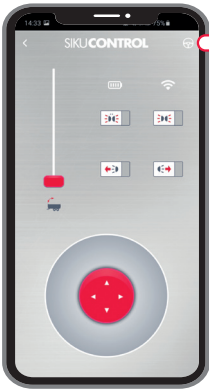

2

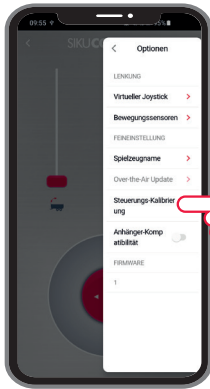

1.



Links Rechts

2.



Mitte setzen

3.







<http://www.siku.de/de/downloads.html>

SIKUCONTROL

Bedienungsanleitung 6731 / Operating instructions for 6731
Mode d'emploi 6731 / Instrucciones de uso 6731
Gebruikshandleiding 6731



A Batterien einlegen / Inserting the batteries / Placer les piles / Colocación de las pilas / Baterijen plaatsen


1



2



3

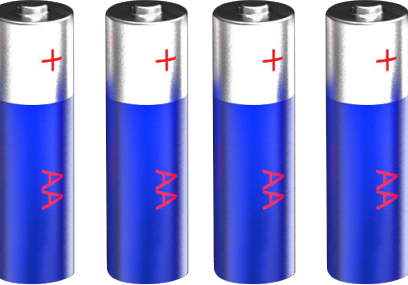

4




5




B Systemstart / System start / Démarrage du système / Inicio del sistema / Systeem starten


1 Download SIKUCONTROLAPP:
Available on the Google play App Store

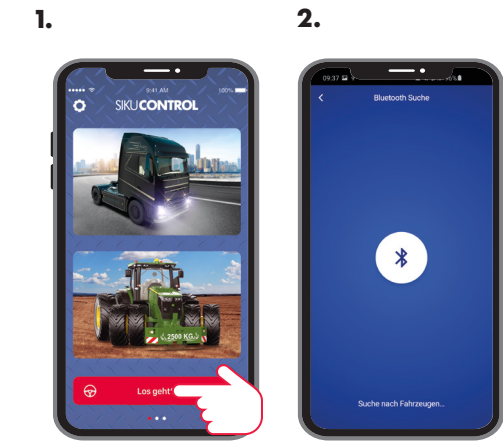

C Systemstart / System start / Démarrage du système / Inicio del sistema / Systeem starten

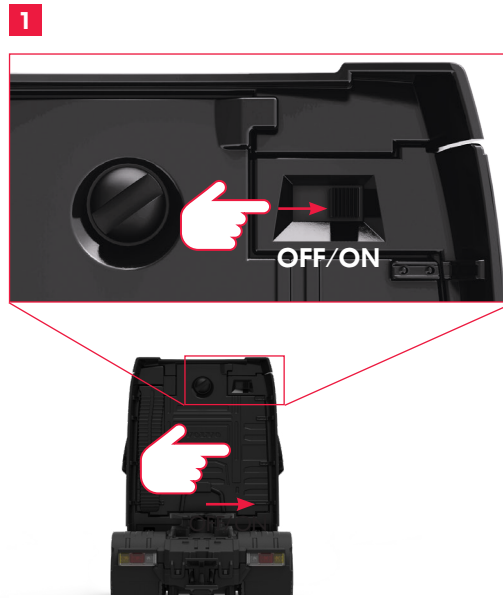

D Steuerung / Control / Commande / Control / Besturing

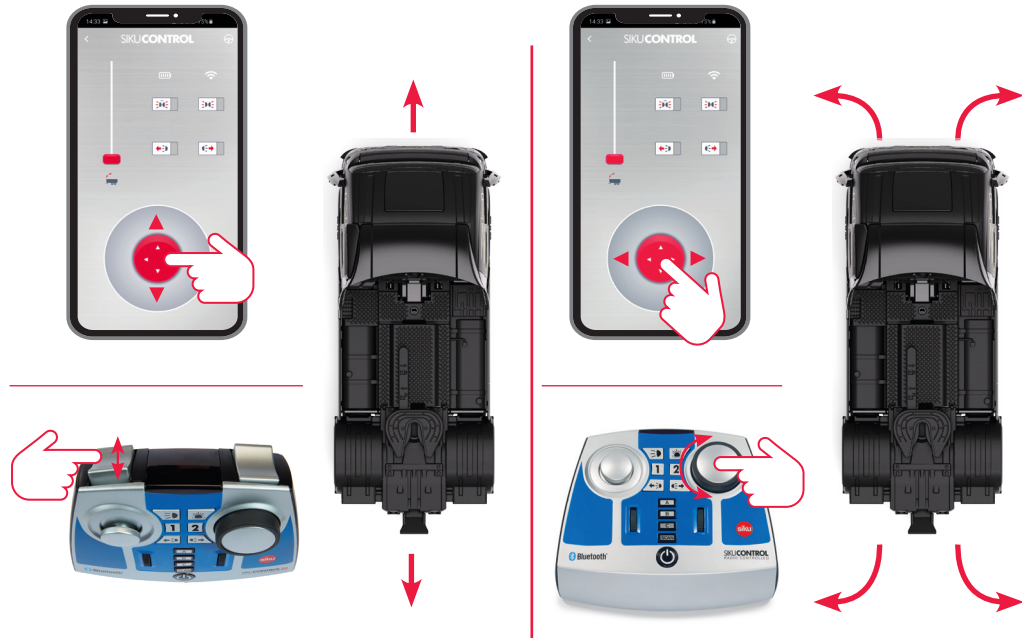

oder / or / ou / o / of



E Licht / Lights / Lumière / Luces / Verlichting

