

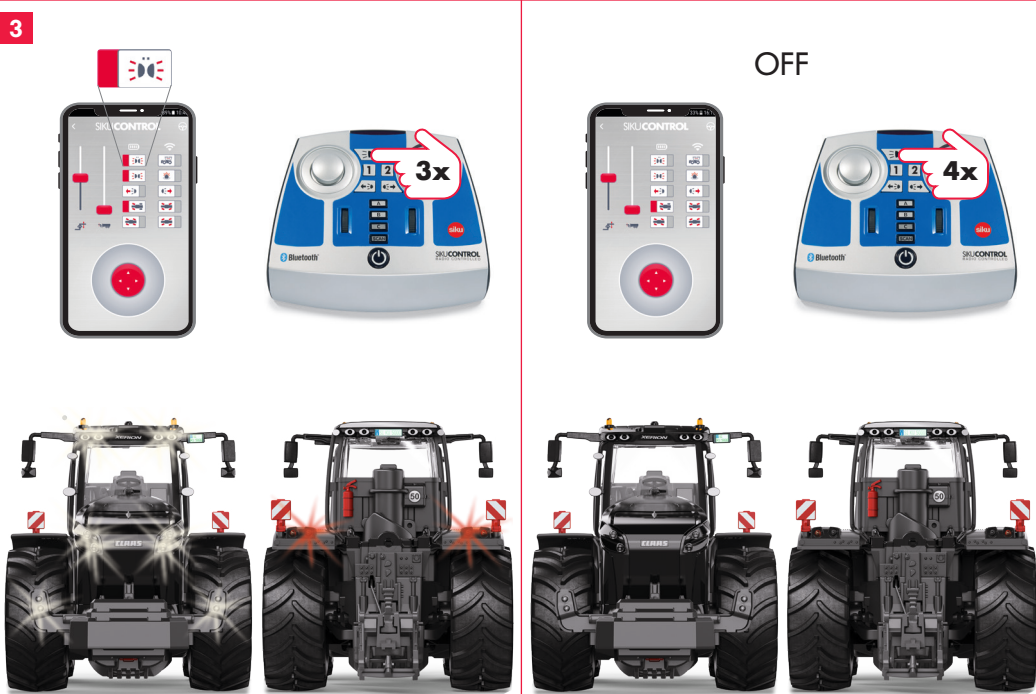
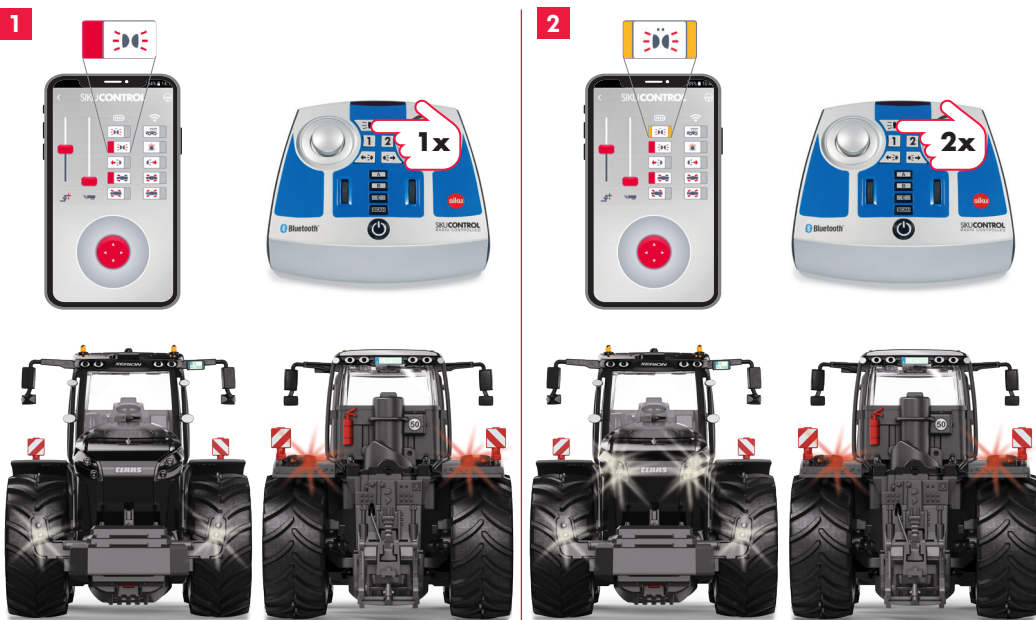



H Licht / Lights / Lumière / Luces / Verlichting

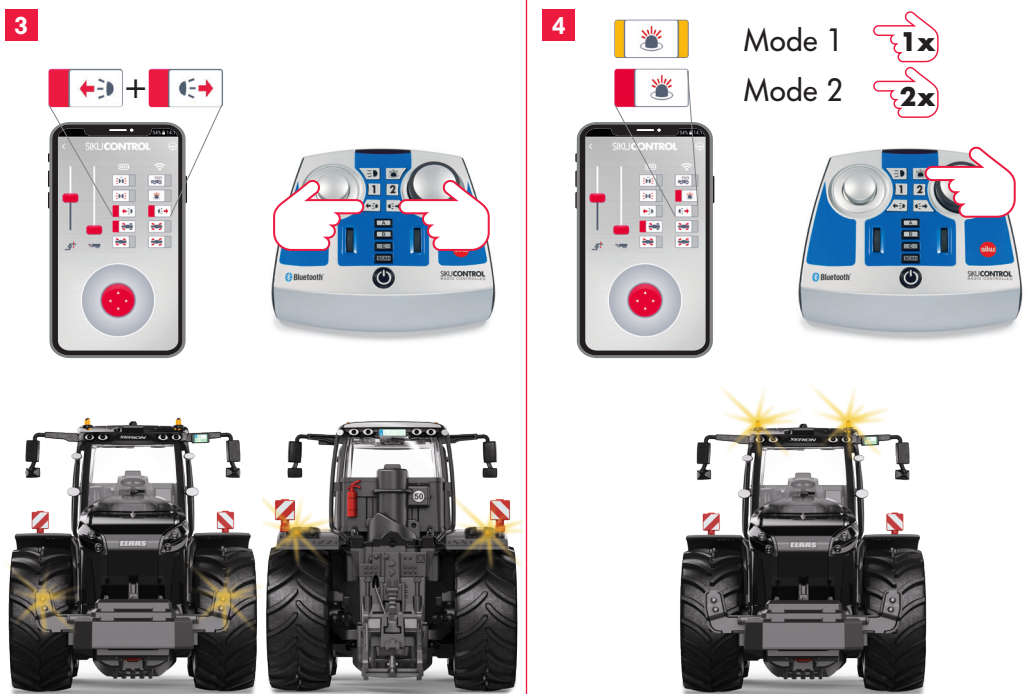

I Blinken / Flashing / Clignotement / Intermitentes / Knipperen

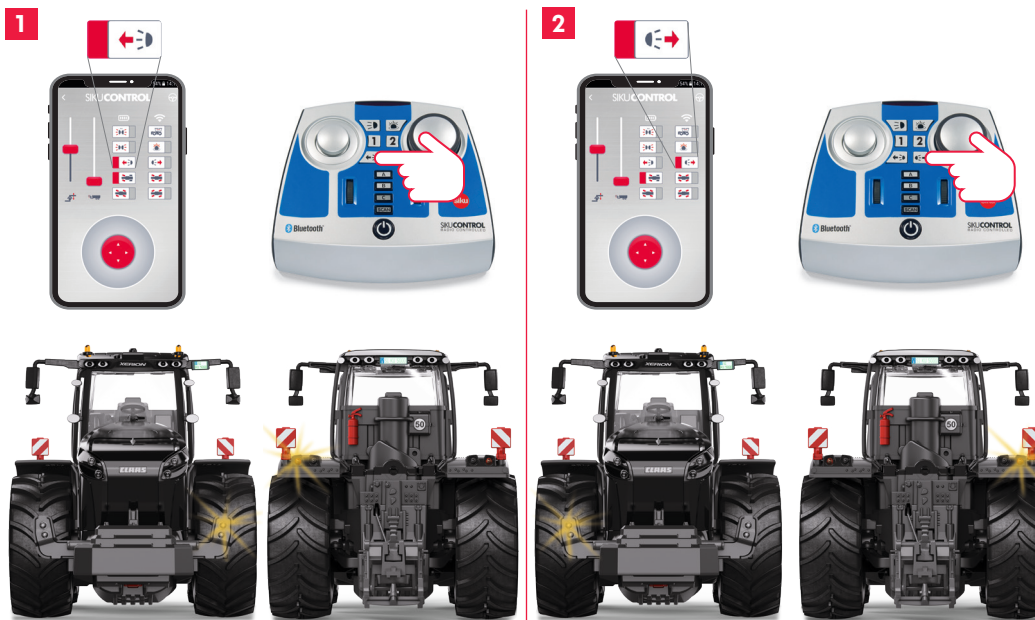


J Front-Anbaugerät wechseln / Change front attachment device / Remplacer un outil rapporté frontal / Cambiar equipo adicional frontal / Aanbouwapparaat voor wisselen

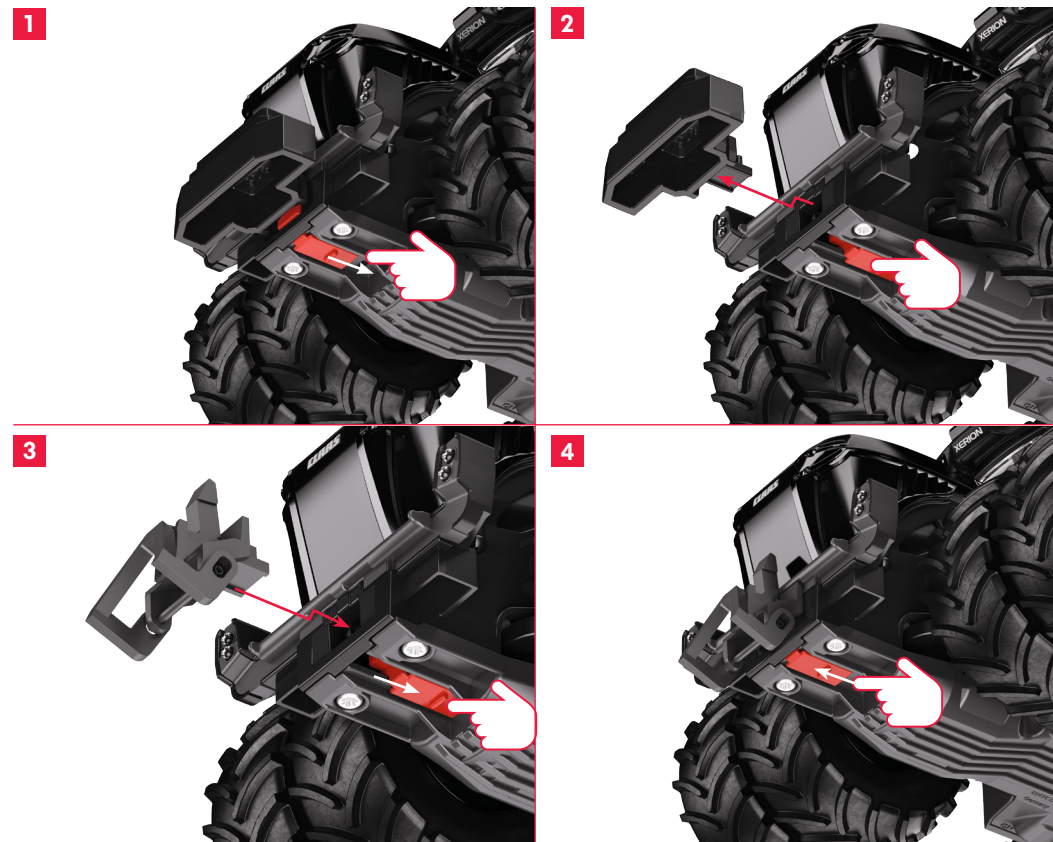


K Doppelreifen montieren / Mounting of twin wheels / Montage des roues jumelées / Montaje de ruedas / Wielmontage



L Lenkjustierung / Steering adjustment / Ajustage de la direction / Ajuste de dirección / Stuurinrichting afstellen

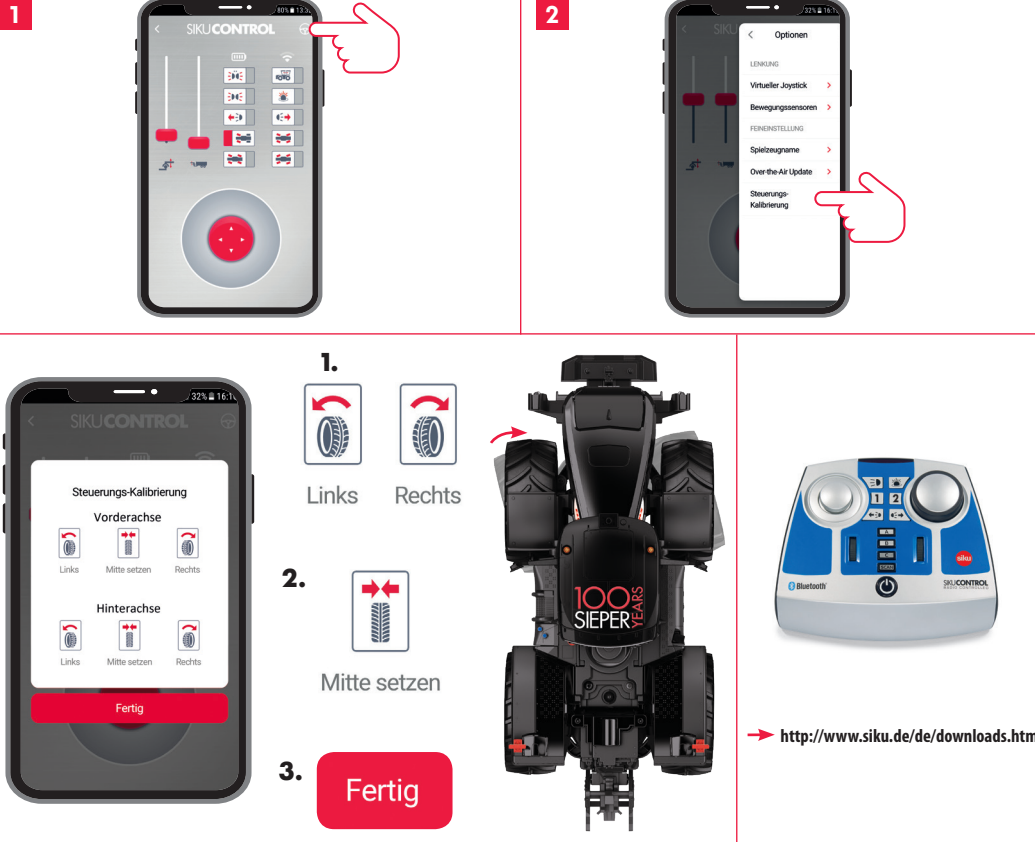


M Eigenen Modellnamen vergeben / Assign your own model name / Attribuer des noms de modèles propres / Asignar un nombre de modelo propio / Eigen modelnaam geven

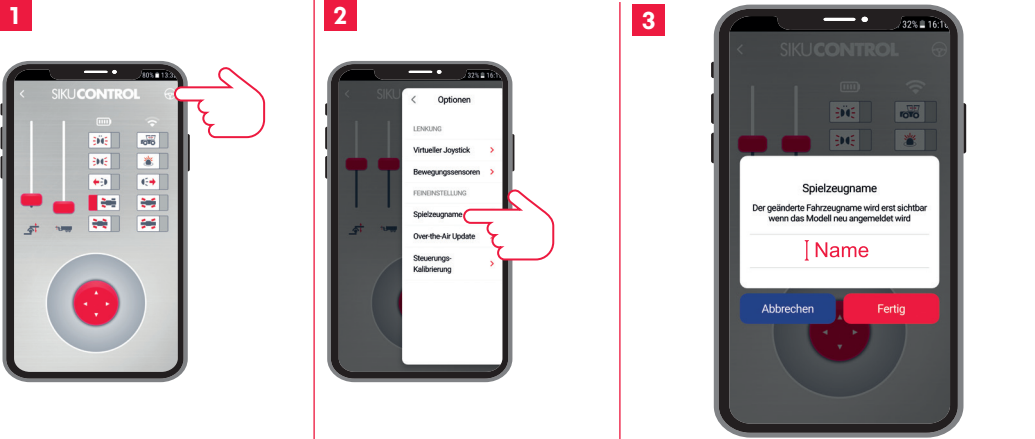

SIKUCONTROL
Bedienungsanleitung 6799 / Operating instructions for 6799
Mode d'emploi 6799 / Instrucciones de uso 6799
Gebruikshandleiding 6799

A Batterien einlegen / Inserting the batteries / Placer les piles / Colocación de las pilas / Batterijen plaatsen

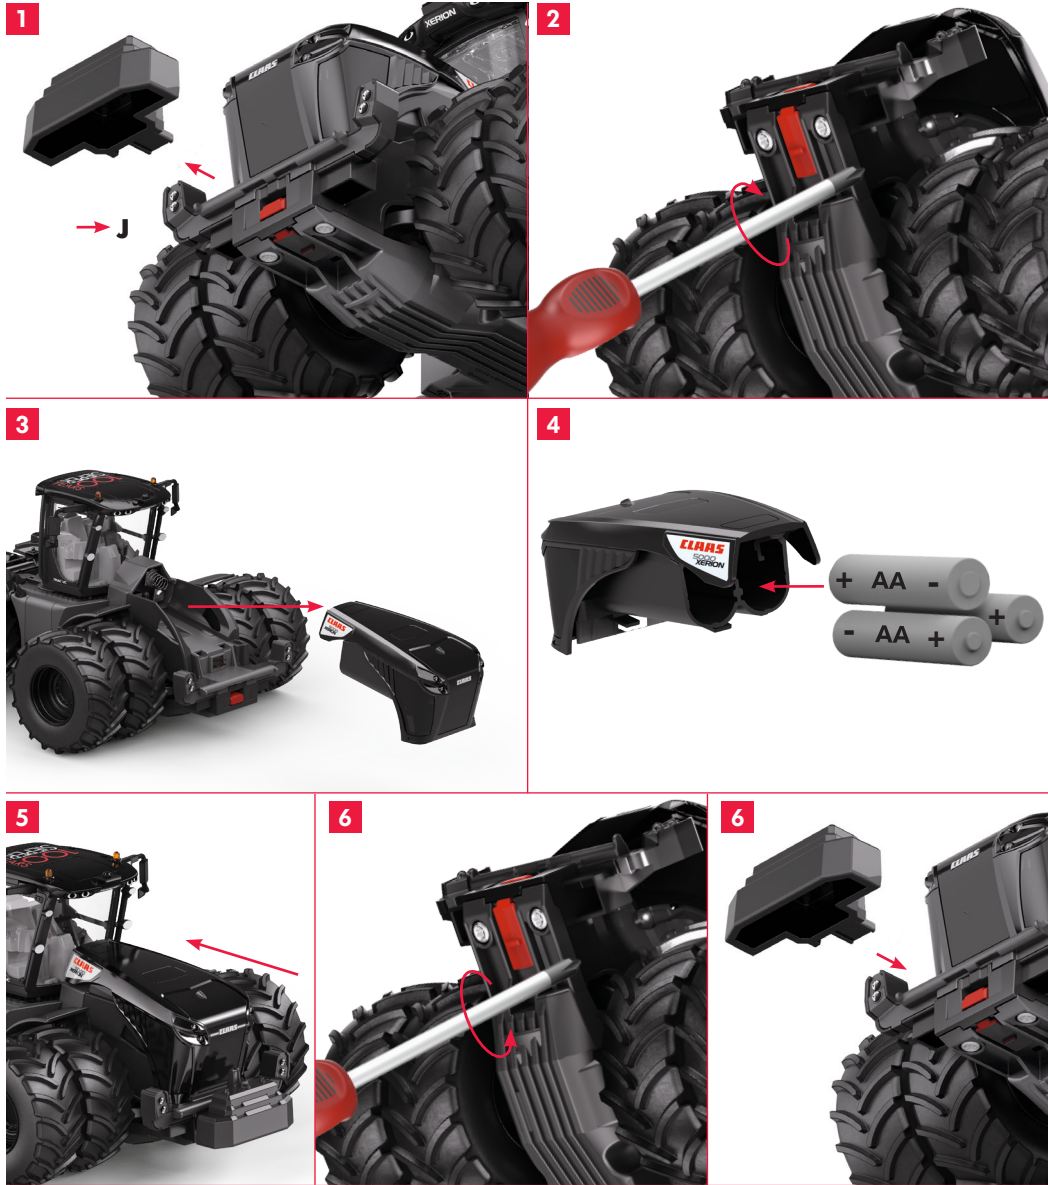

B Systemstart / System start / Démarrage du système / Inicio del sistema / Systeem starten


1 Download SIKU**CONTROL**APP:
Available on the Google play App Store

2




OFF/ON

3

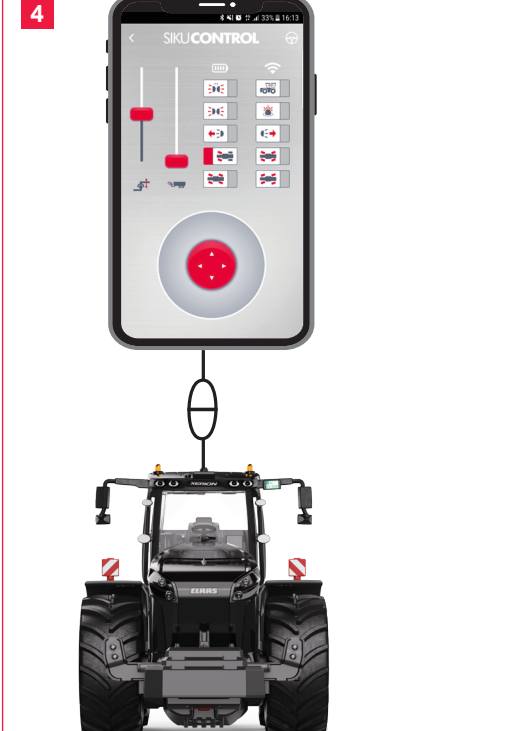

4

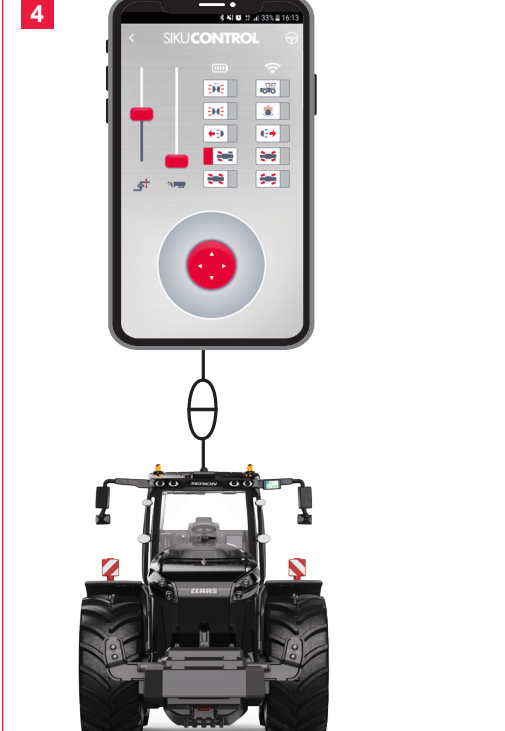


C Systemstart / System start / Démarrage du système / Inicio del sistema / Systeem starten

1




ON/OFF

3

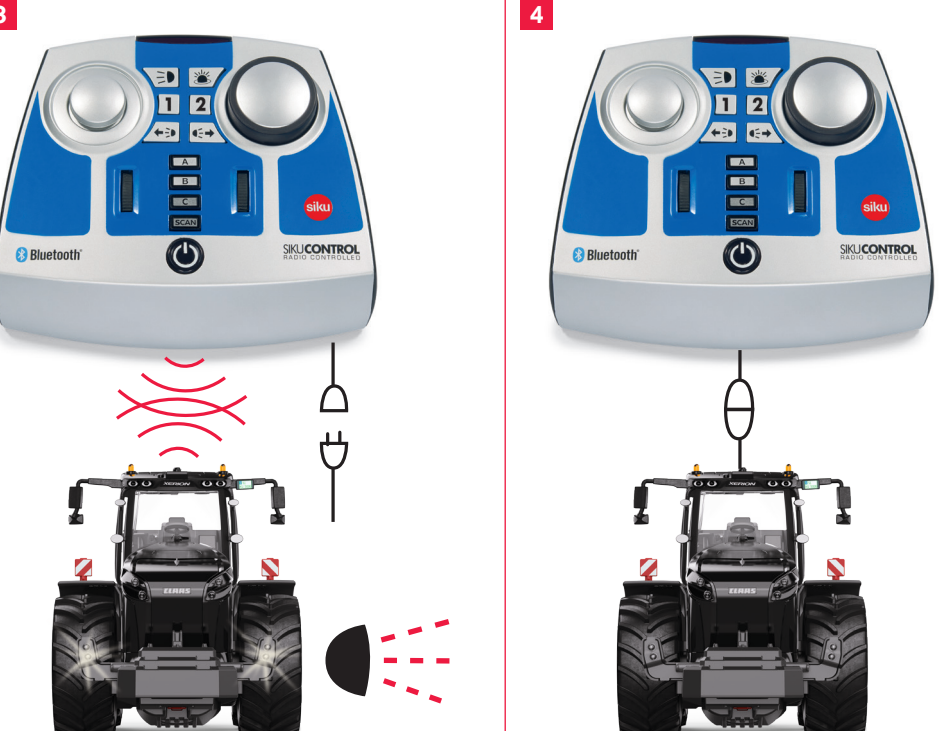

4

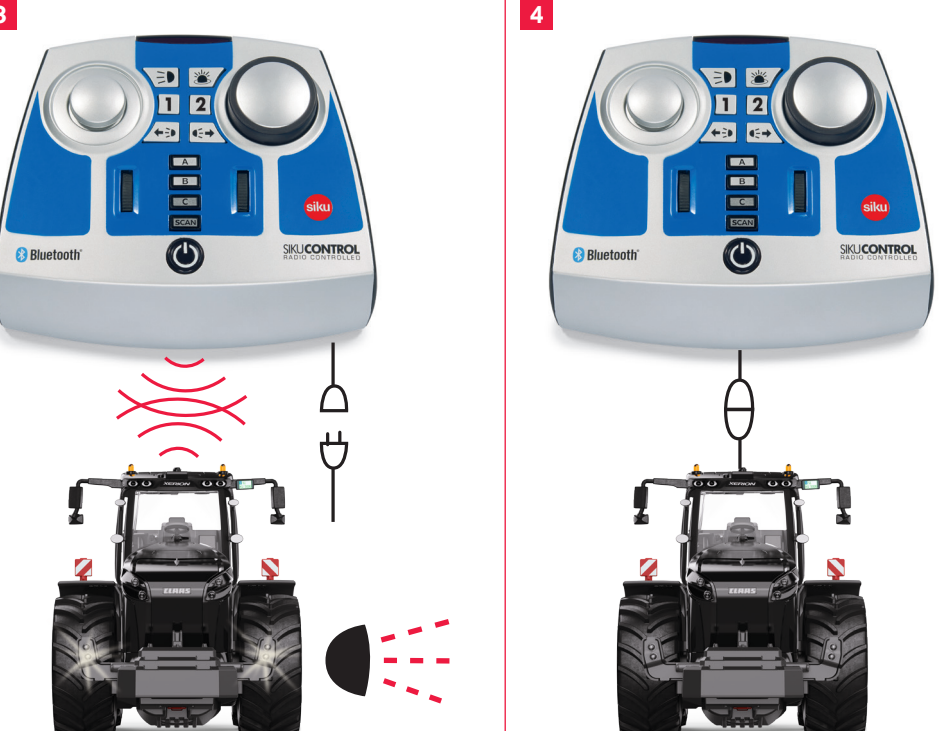


D Lenk-Modus / Steering mode / Mode direction / Modo de dirección / Besturingsmodus

Start mode



1x


2x

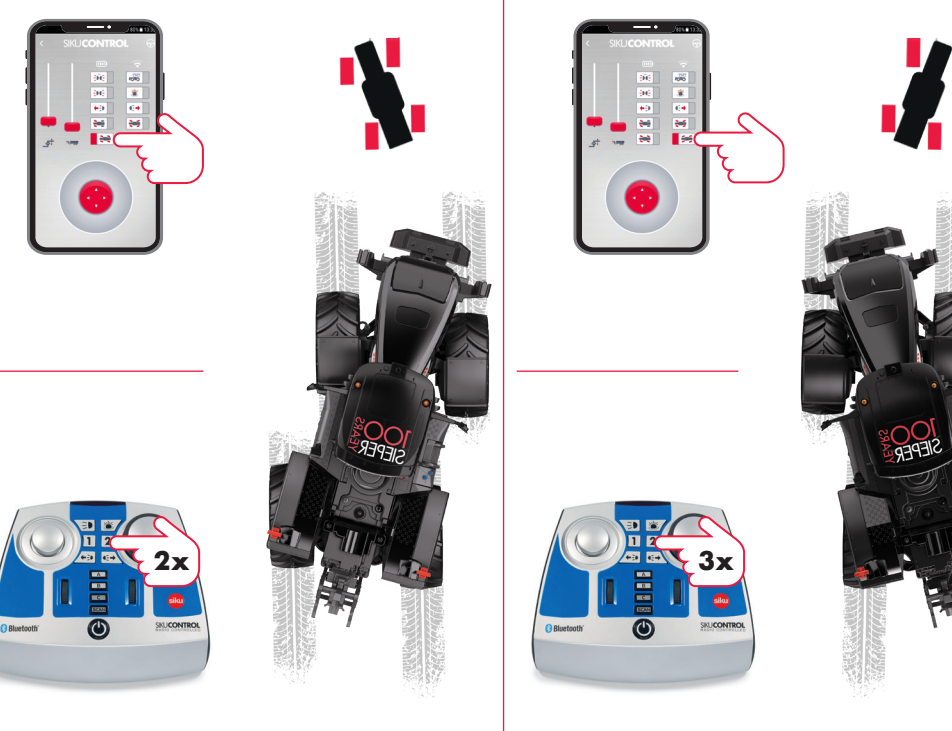

3x

E Steuerung / Control / Commande / Control / Besturing

1.

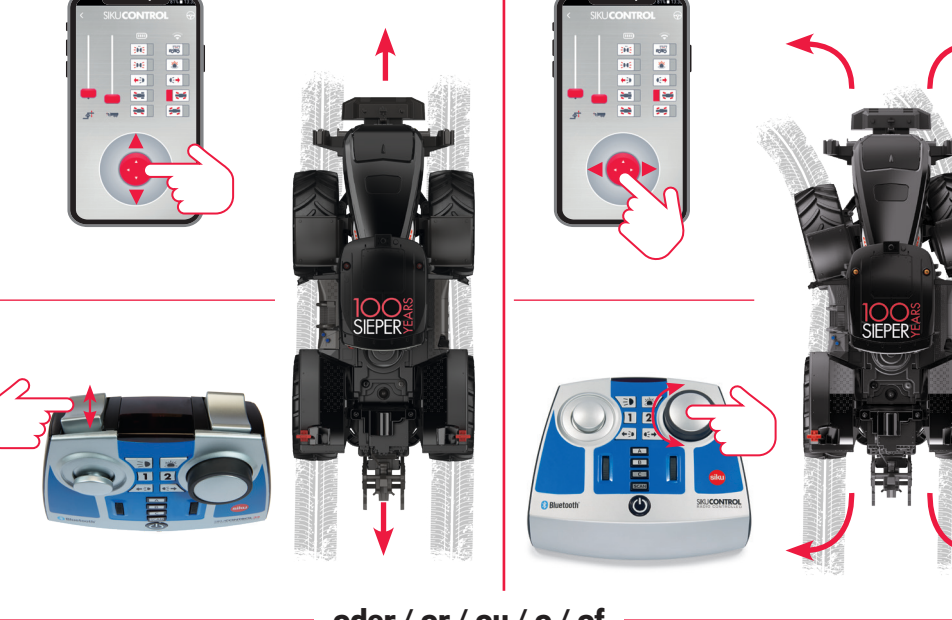


oder / or / ou / o / of

2.



Stop

F Kabine drehen / Rotate the cab / Tourner la cabine / Girar cabin / Cabine draaien

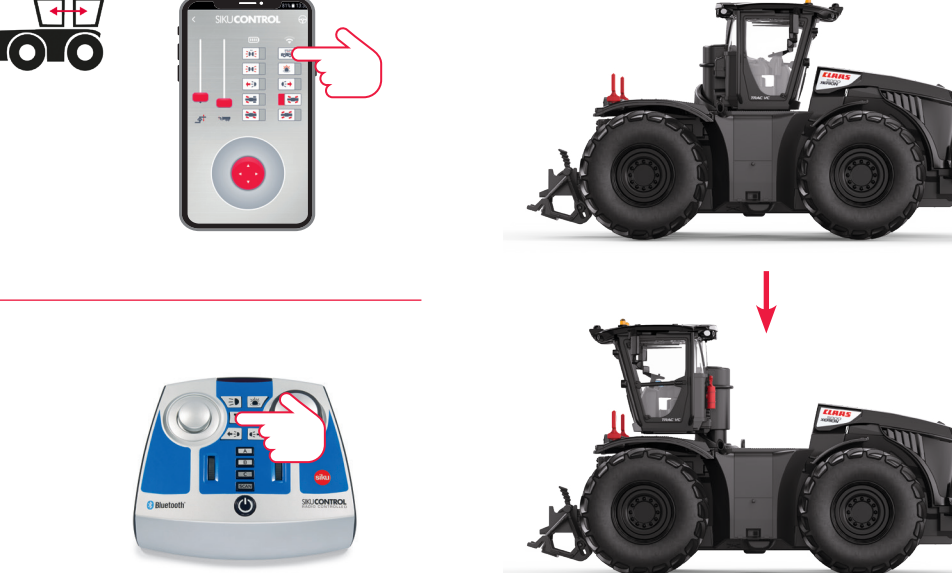

G automatisch Kuppeln / Automatic coupling / Attelage automatique / Acoplamiento automático / Automatisch koppelen

