

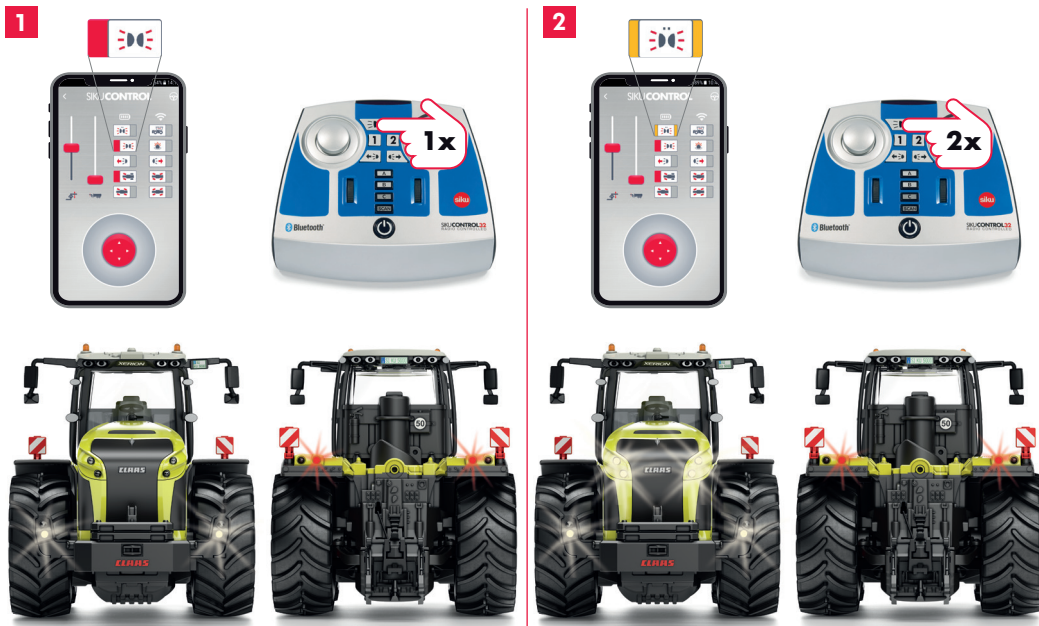



H Licht / Lights / Lumière / Lucas / Verlichting

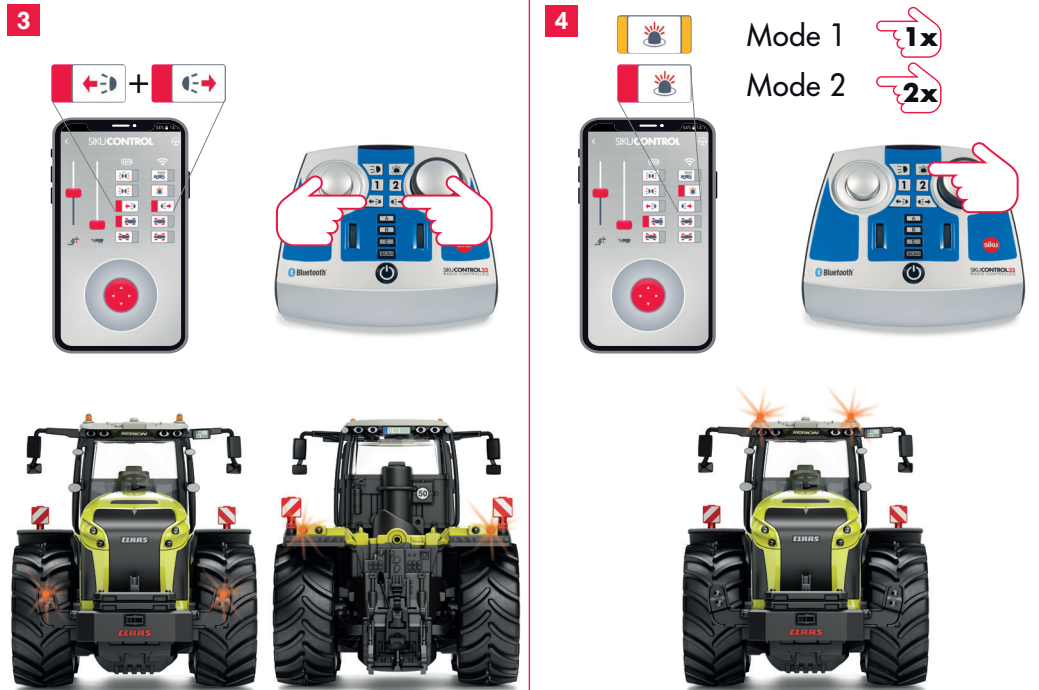


I Blinken / Flashing / Clignotement / Intermitentes / Knipperen

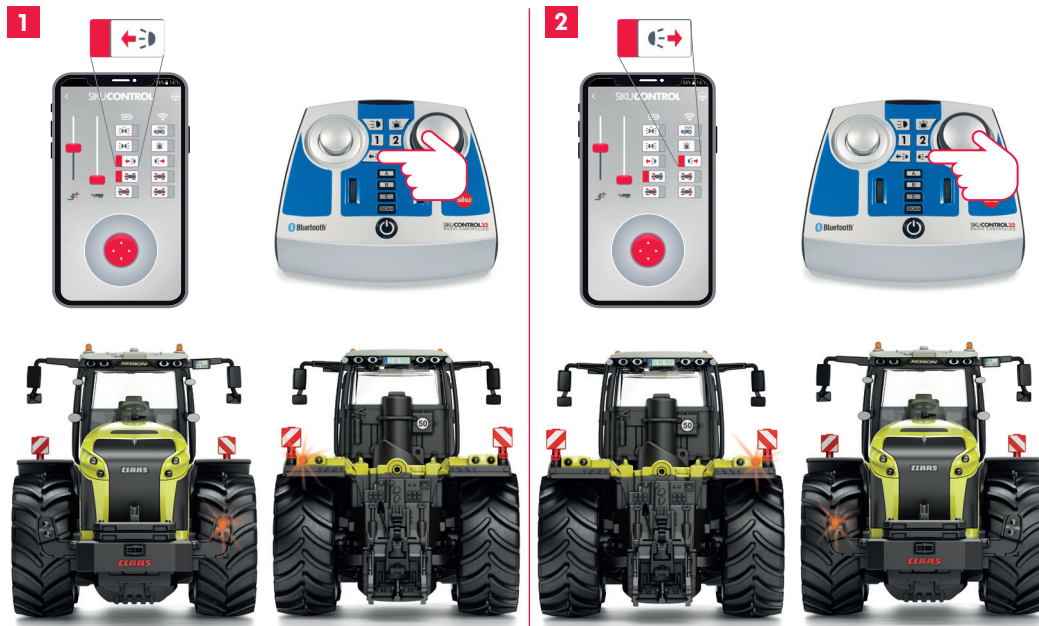

J Front-Anbaugerät wechseln / Change front attachment device / Remplacer un outil rapporté frontal / Cambiar equipo adicional frontal / Aanbouwapparaat voor wisselen

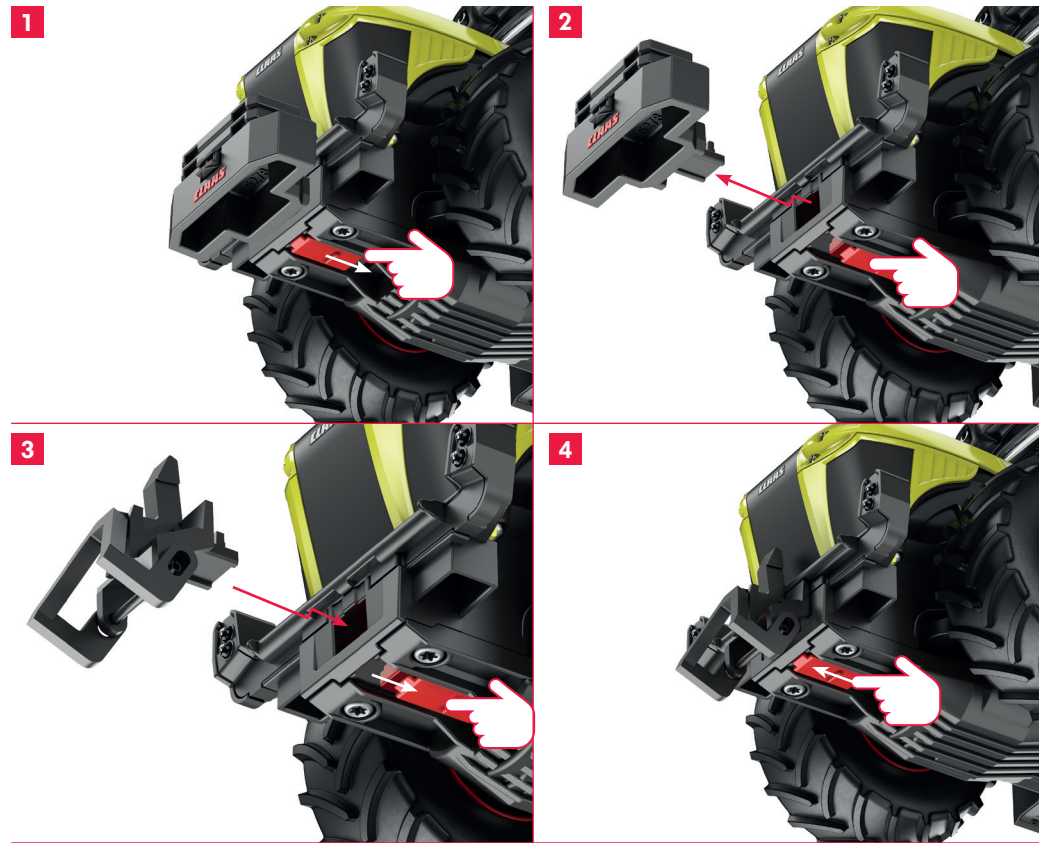

L Eigenen Modellnamen vergeben / Assign your own model name / Attribuer des noms de modèles propres / Asignar un nombre de modelo propio / Eigen modelnaam geven

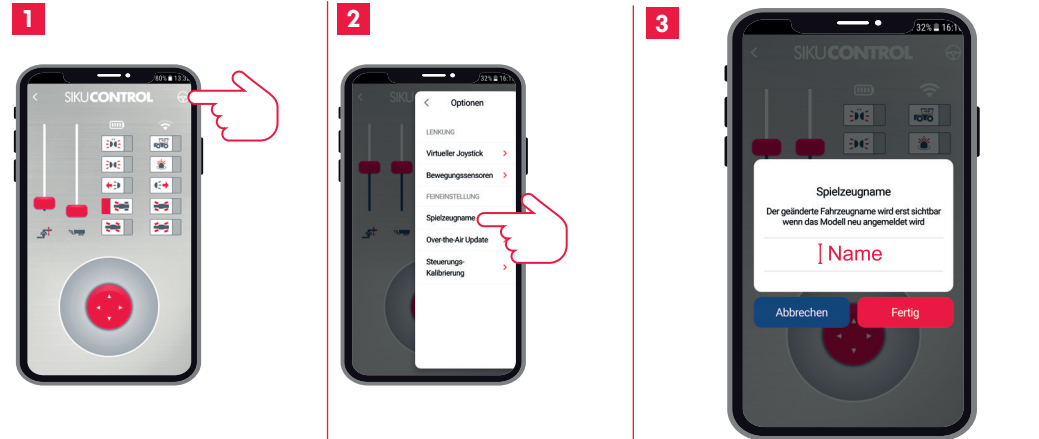

K Lenkjustierung / Steering adjustment / Ajustage de la direction / Ajuste de dirección / Stuurinrichting afstellen




SIKUCONTROL

Bedienungsanleitung 6791 / Operating instructions for 6791

Mode d'emploi 6791 / Instrucciones de uso 6791

Gebruikshandleiding 6791

A Batterien einlegen / Inserting the batteries / Placer les piles / Colocación de las pilas / Baterijen plaatsen

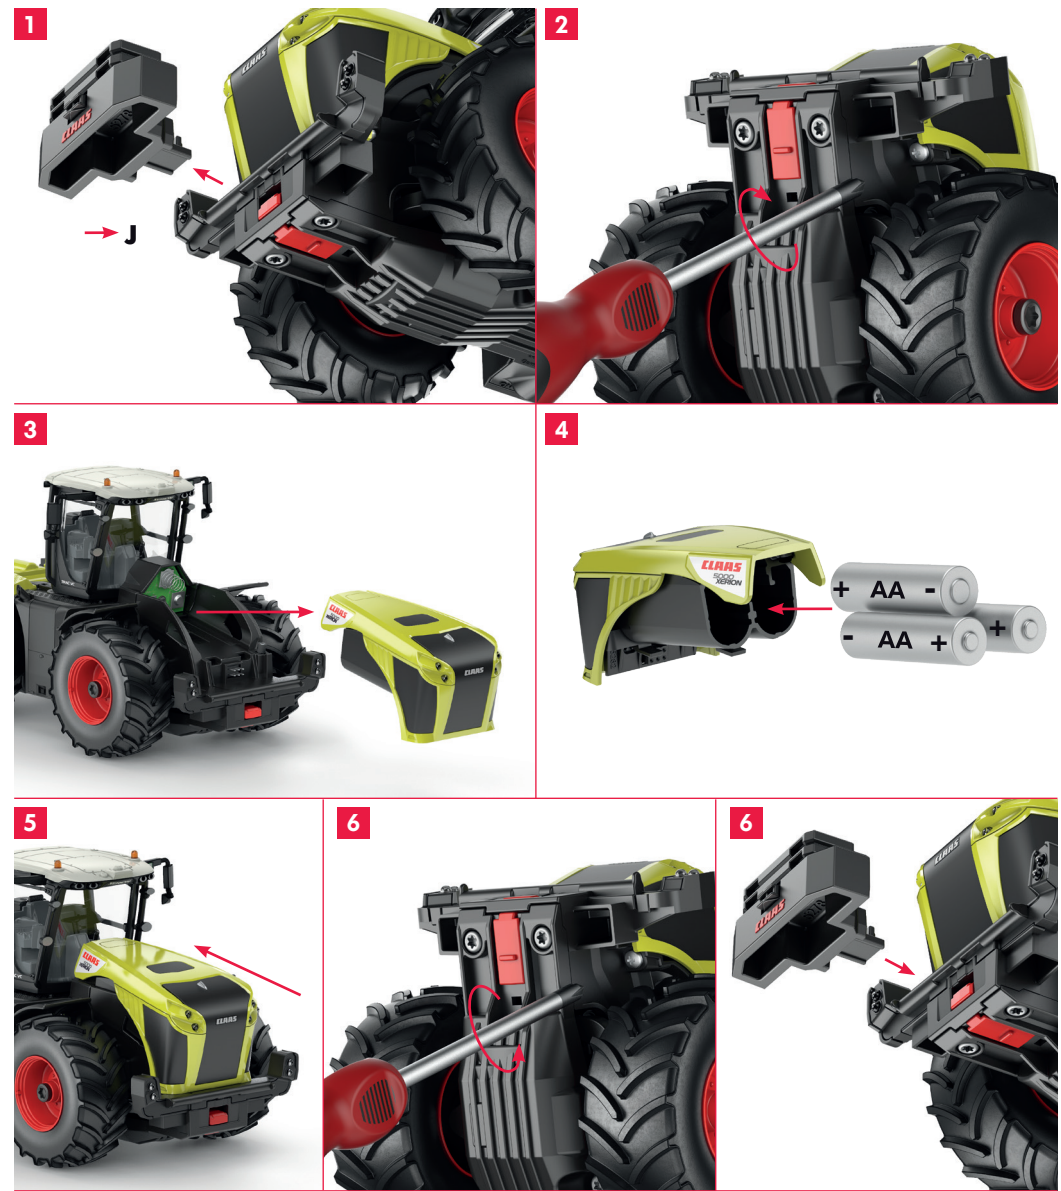

B Systemstart / System start / Démarrage du système / Inicio del sistema / Systeem starten

1 Download SIKU**CONTROL**APP:


 Available on the
Google play

 Available on the
App Store


2



3

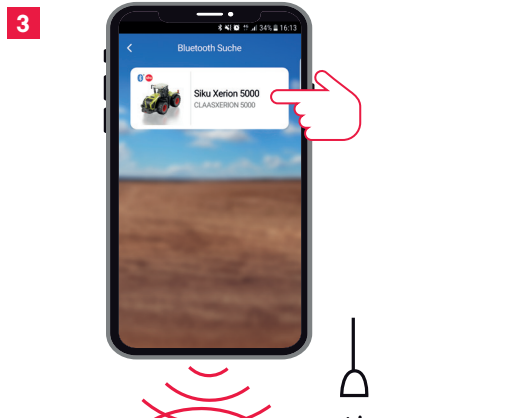


4

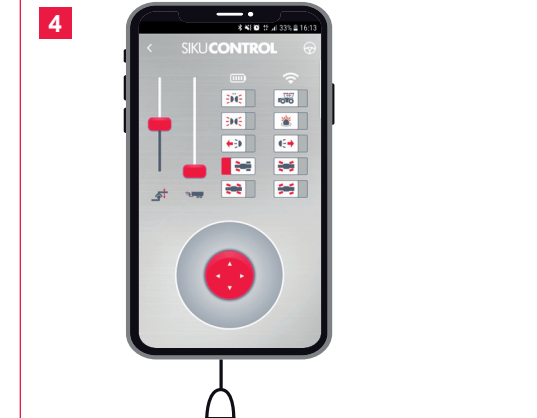


C Systemstart / System start / Démarrage du système / Inicio del sistema / Systeem starten



1

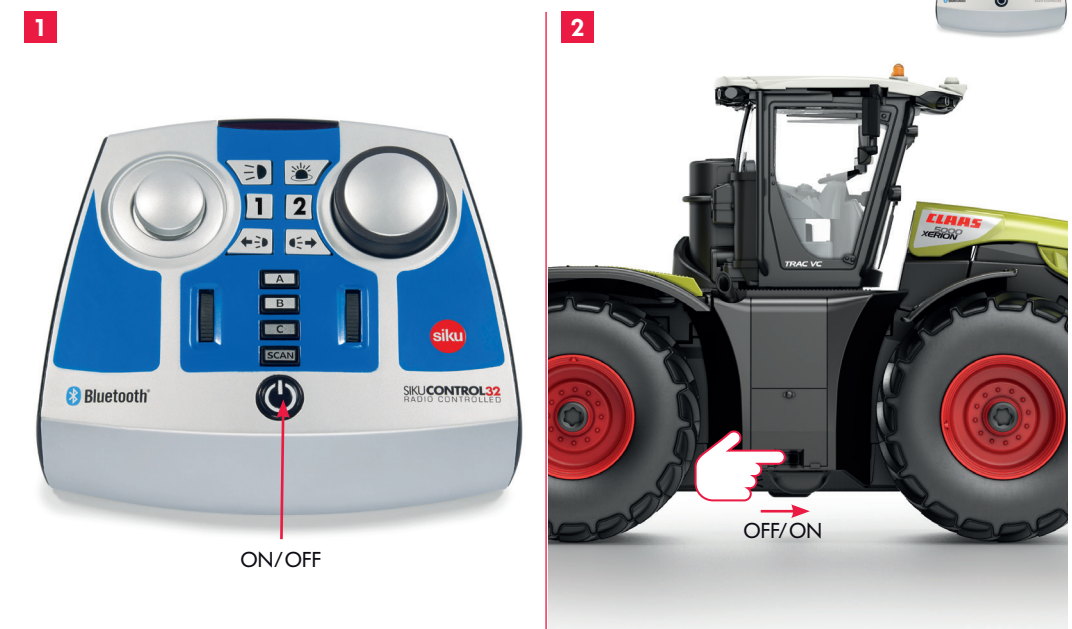



2

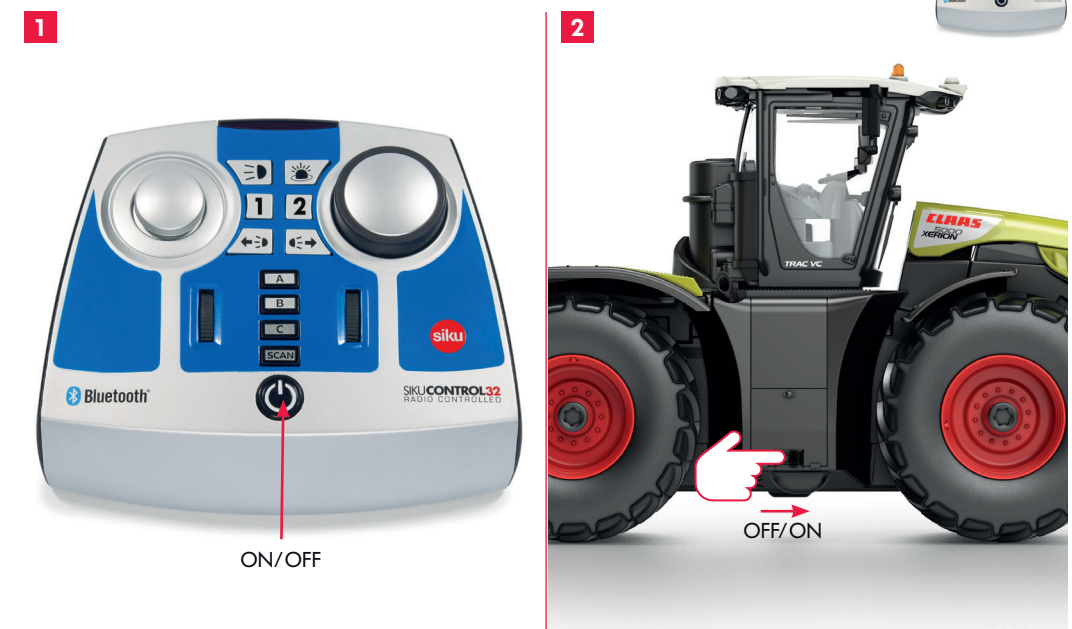

3

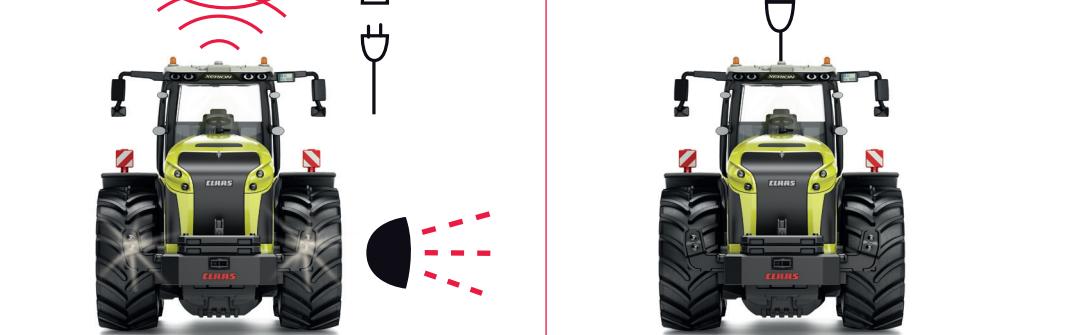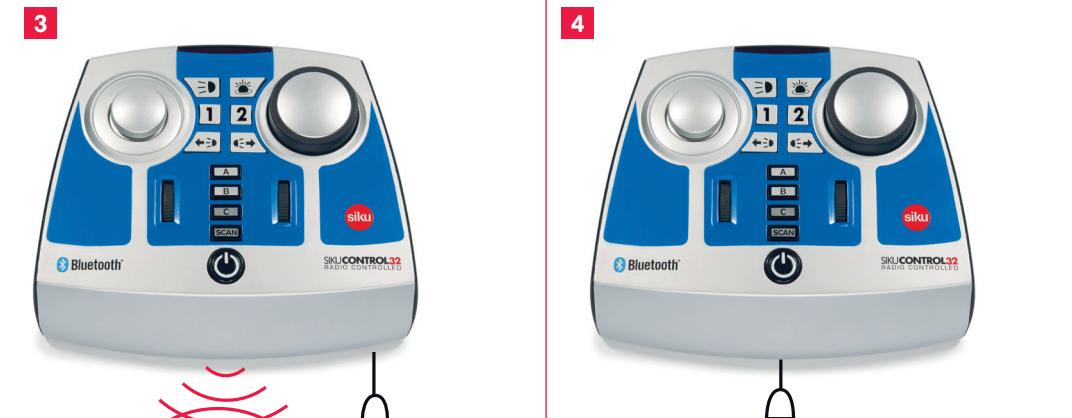


4

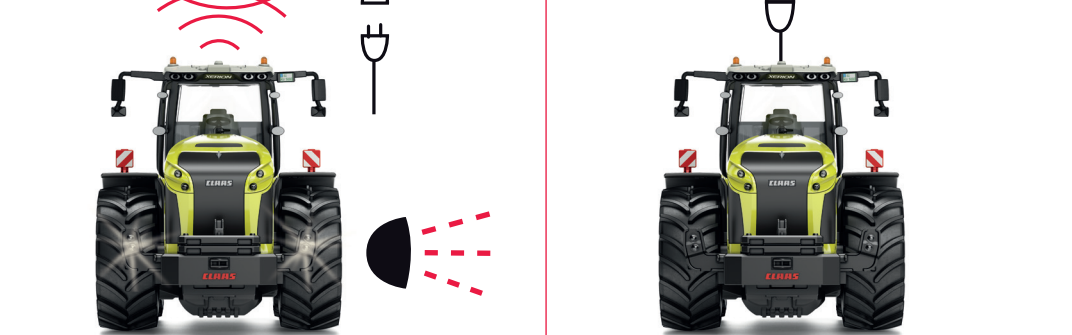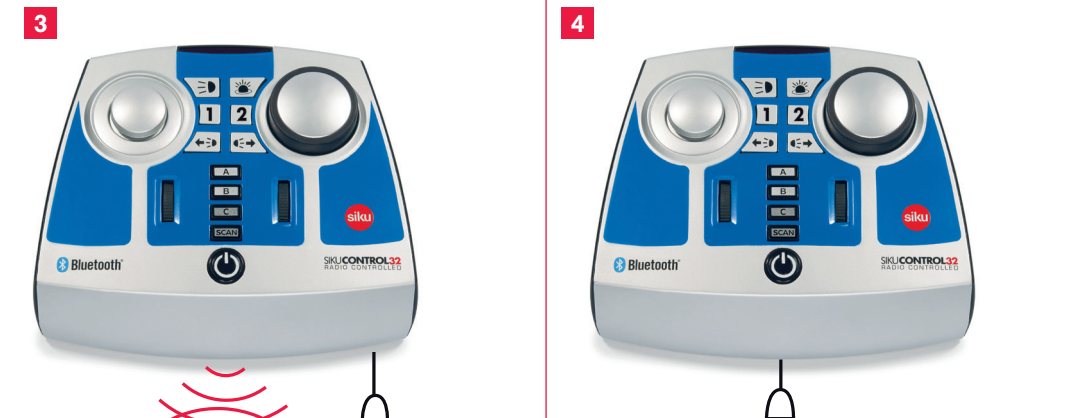


D Lenk-Modus / Steering mode / Mode direction / Modo de dirección / Besturingsmodus


Start mode

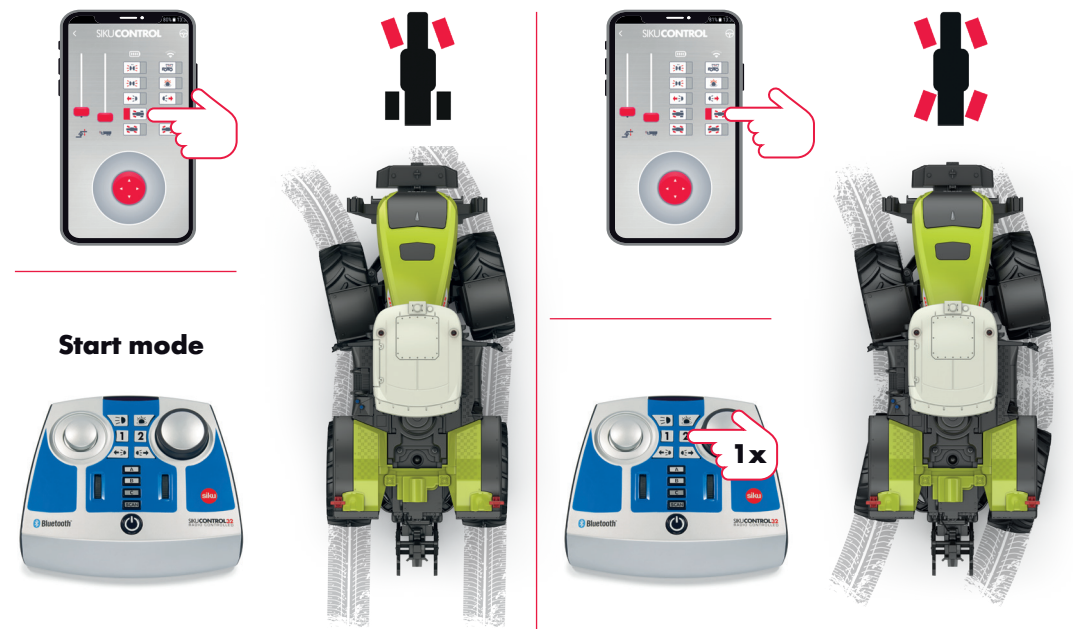


1x

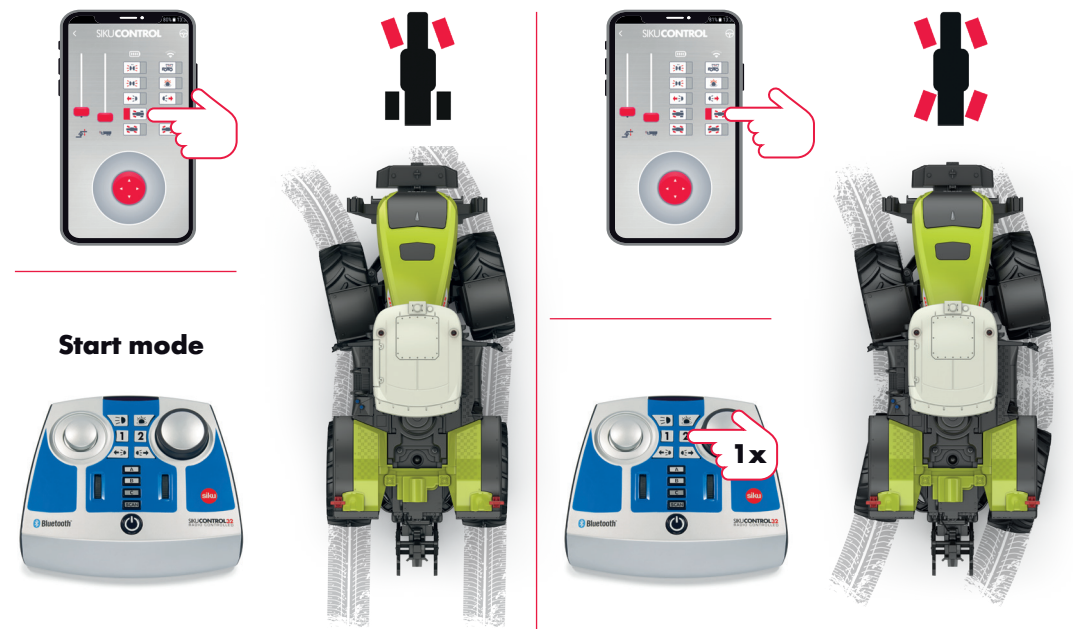

2x

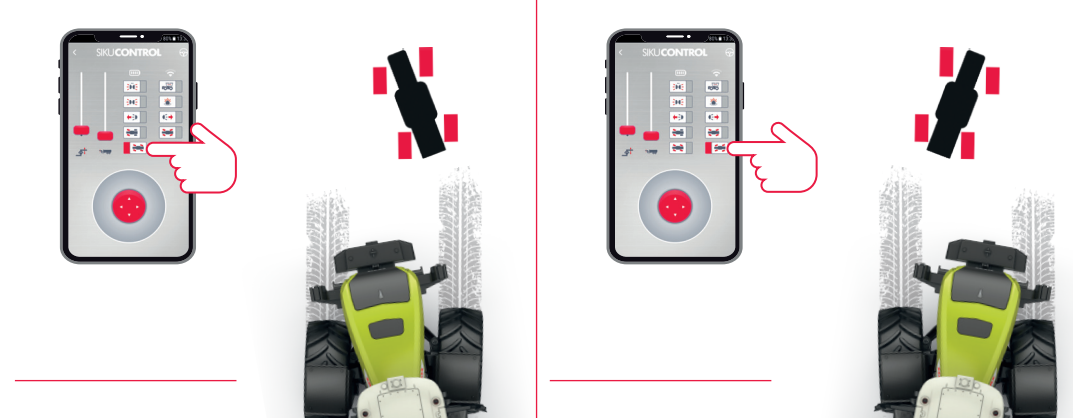


3x

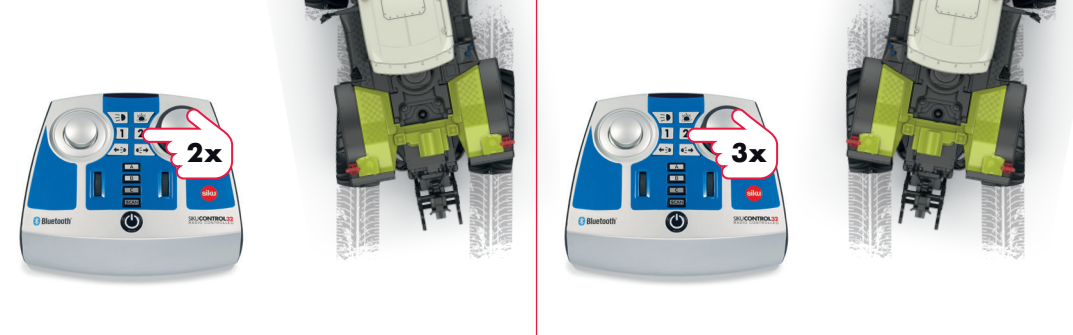


E Steuerung / Control / Commande / Control / Besturing

1.

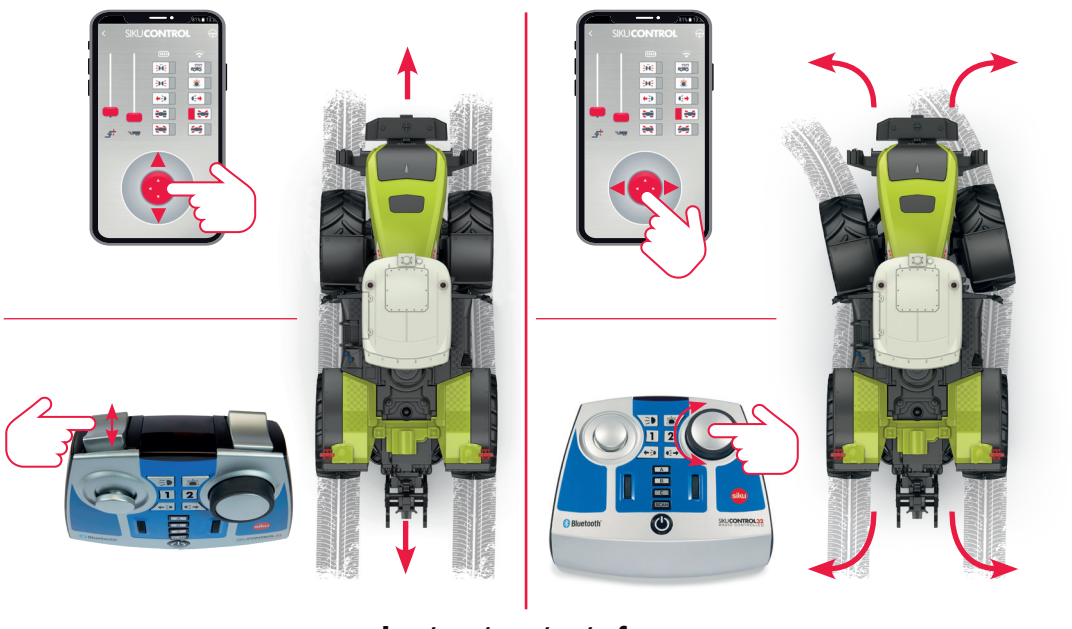

oder / or / ou / o / of

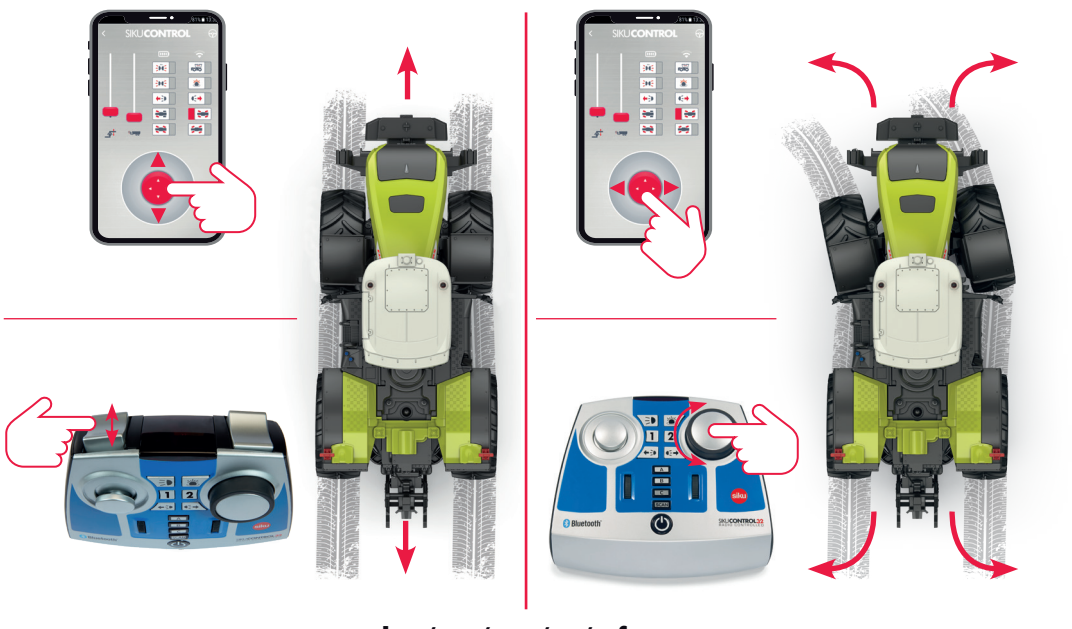

2.




Stop




F Kabine drehen / Rotate the cab / Tourner la cabine / Girar cabin / Cabine draaien

1.

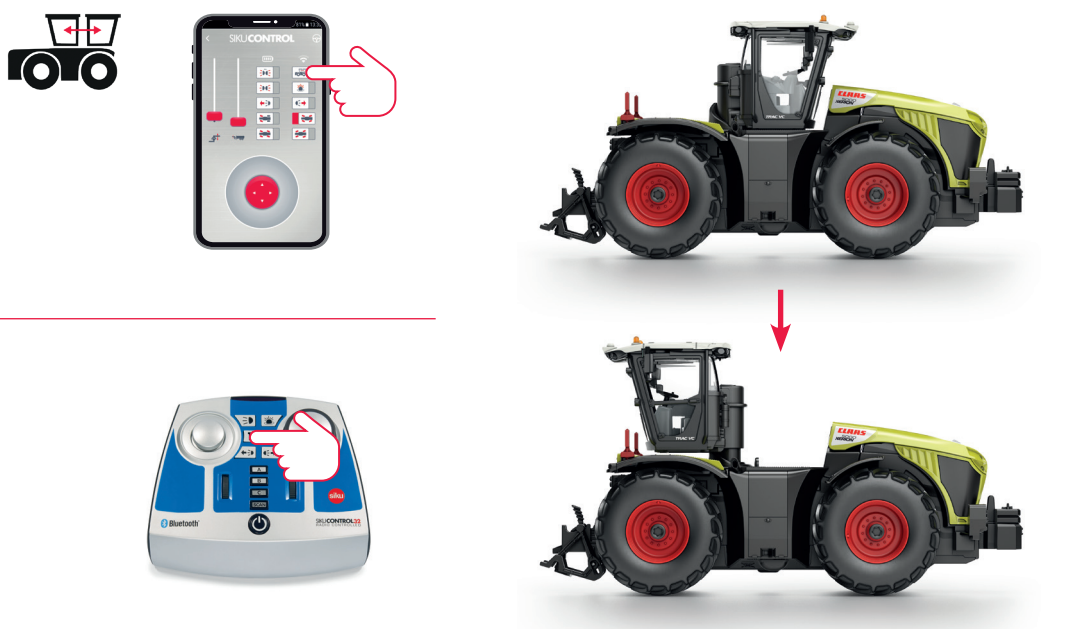

2.

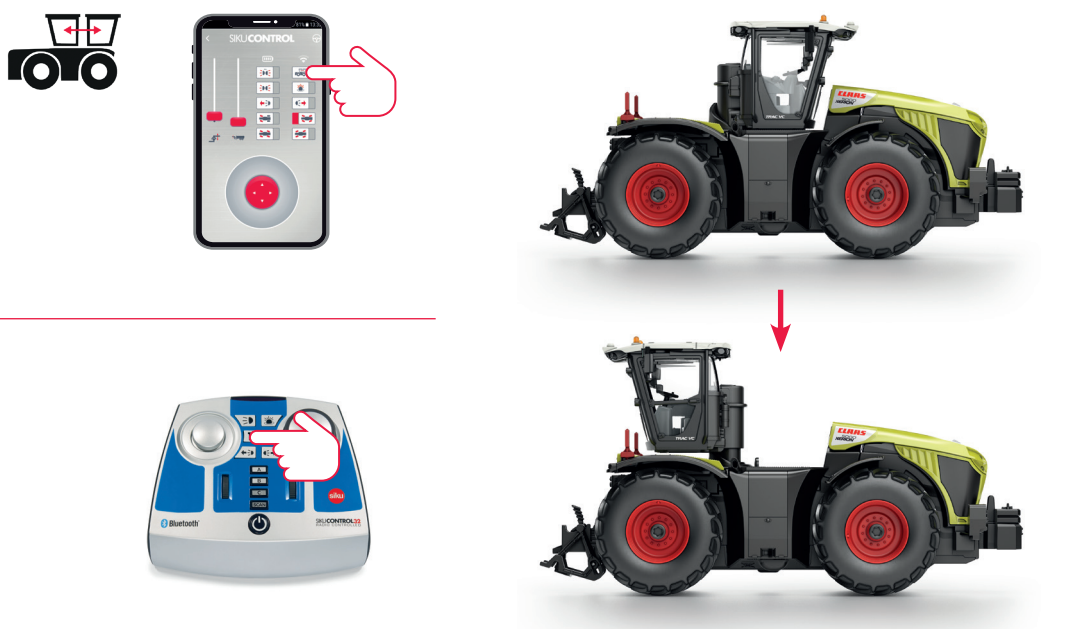

G automatisch Kuppeln / Automatic coupling / Attelage automatique / Acoplamiento automático / Automatisch koppelen



3.

