

# SIKU CONTROL




Bedienungsanleitung #6744

Operating Instructions #6744 / Mode d'emploi #6744


Instrucciones de uso #6744 / Gebruikshandleiding #6744




## A System-Start / System start / Démarrage du système Arranque del sistema / Systeemstart

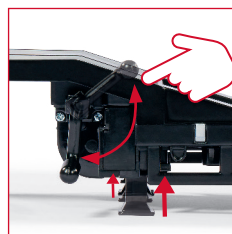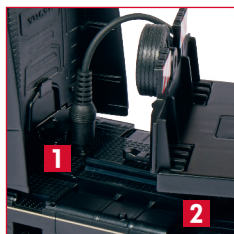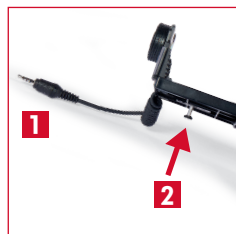


## B Licht / Lights / Feux / Luz / Lichten

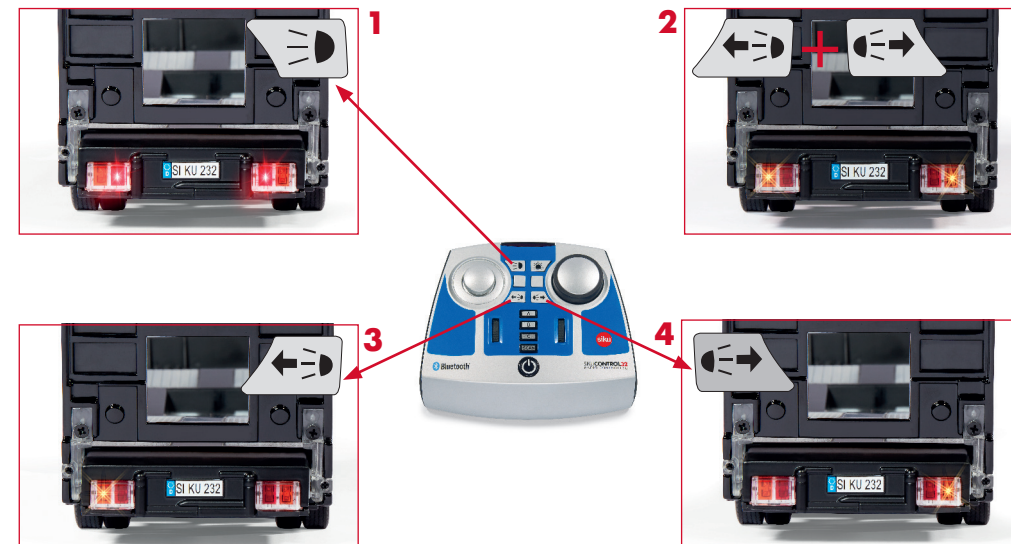


## C Licht / Lights / Feux / Luz / Lichten

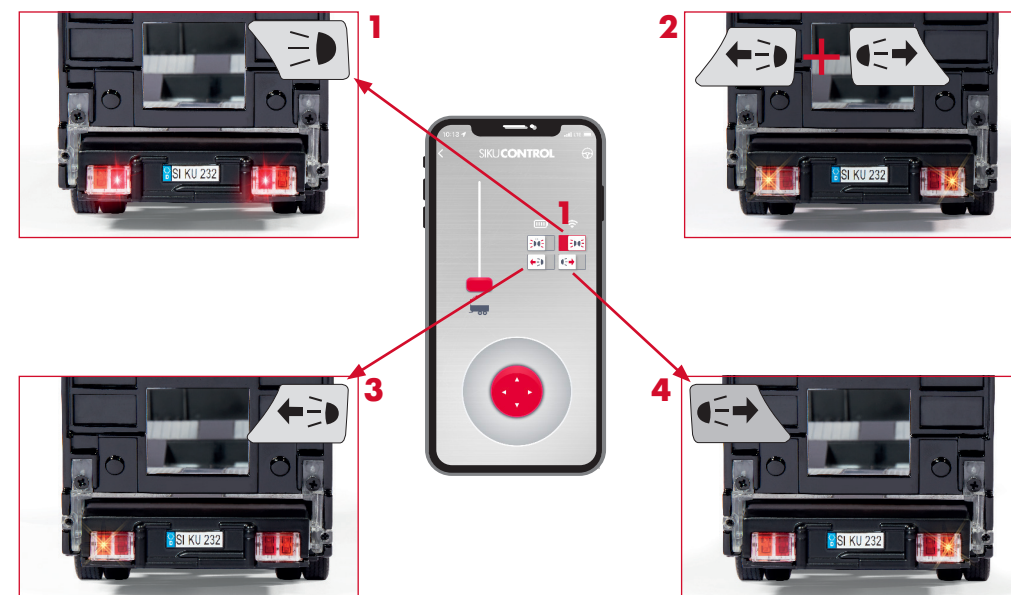

**D Anbindung an einen Traktor / Connection to a tractor / Raccordement à un tracteur/Acoplamiento a un tractor/Aan een tractor koppelen**

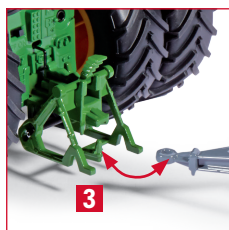

**C Kippen der Laderampe / Lowering the loading ramp / Basculement de la rampe de chargement /Basculamiento de la rampa de carga/Kantelen van de oprijplaten**

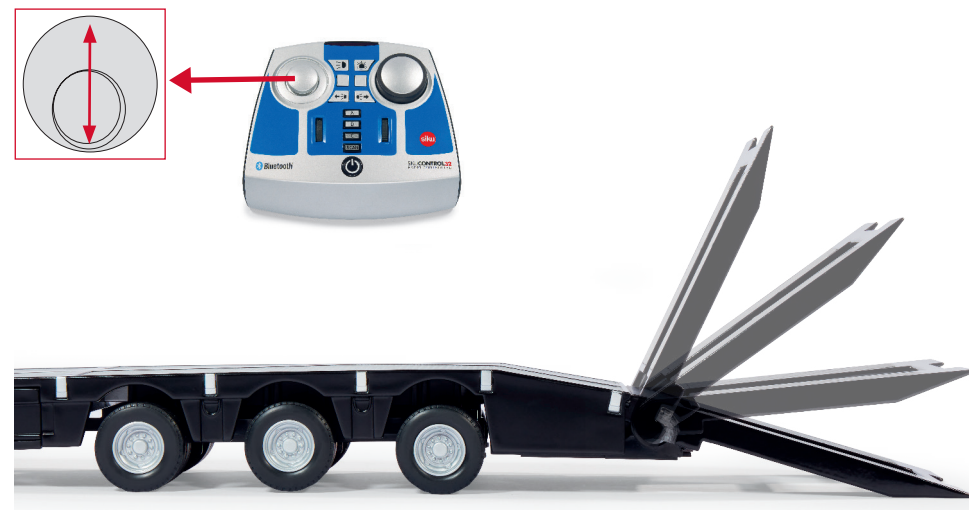

**C Kippen der Laderampe / Lowering the loading ramp / Basculement de la rampe de chargement /Basculamiento de la rampa de carga/Kantelen van de oprijplaten**

