


1

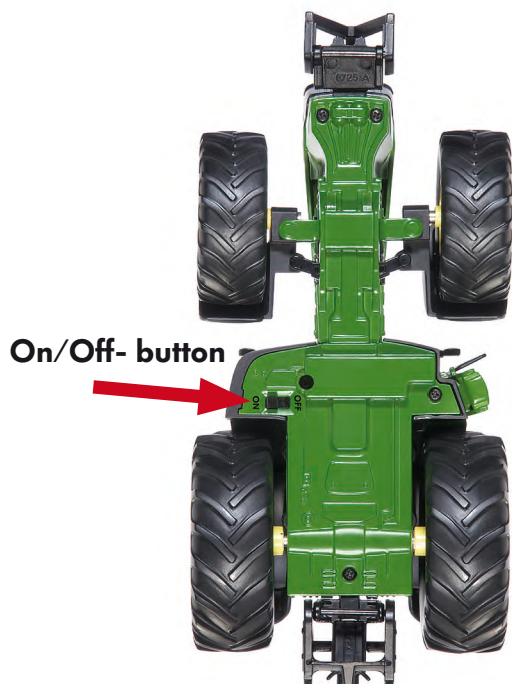

# Adjust mid-point of the steering

These instructions apply to the following models: 6880, 6881, 6882

Switch on tractor:  
Turn tractor over and press  
the on/off button on the bot-  
tom.

Tractor flashes.

siku

2



4



Drive as usual — drive  
straight and make  
adjustments using  
buttons "O" and "+"  
until the tractor is  
travelling straight.



3



Then switch on the  
hand-held transmitter.  
Only release the "X"  
and "-" buttons once the  
connection between the  
tractor and the hand-  
held transmitter has  
been established.

5

Once straight travel has been set  
up, switch off the tractor and the  
hand-held transmitter. Switch on  
the hand-held transmitter and  
the model as normal for regular  
play.

